

Instruction Manual “Hairoyal Double Tweezer”

General Informations

Do not use machines with transport damages: in this case contact Hairoyal for assistance.
Use the protective gloves when provided.

Plug off the electricity cable Before taking any action inside the electric system.

Safeguard the cable from high temperatures, oils, cutting edges. Do not let it hang from table borders and furniture.

Do not introduce external objects in the device.

Do not utilize neither water nor sprays to clean the machine.

Do not force the apparel electric system (Electric shock danger).

Do not connect the pliers with different machines

In case of troubleshooting test as following:

- Is the plug correctly inserted into electric socket ?
- Is the fuse intact ?
- Is the pliers connector correctly inserted in the socket on the machine front panel?

If troubleshooting persists, please contact technical assistance.

Technical Characteristics

- Tension of feeding : 100/230 V ca - 50 / 60 Hz.
- Maximum power : 50 W
- Electronic controll by microprocessor
- Back illuminated Display LCD
- Dimensions of the electric power station : 250 x 180 x 110 mm.
- Total weight : nearly 3 kg.

Connection to the electric power

Before connecting the cable to the electric power verify that the electric voltage corresponds to the one indicated on the machine (rear panel). Utilize always the original electric cable given with the electric power station or adequate ones. Avoid electric extension.

To start (2 tweezers)

Connect the tweezers into the plugs on the front panel.

Connect the electric cable to the electric connector on the rear panel and switch on “I”.

Press the button ON/OFF on the front panel. When you switch on, a welcoming message will appear on the display and it will stop when you push a +/- button . Then the display will indicate the real temperature on the tweezer.

To start (just 1 tweezer)

Connect the tweezer into the **plug n. 1** on the front panel.

Connect the electric cable to the electric connector on the rear panel and switch on “I”.

Press the button ON/OFF on the front panel. When you switch on, a welcoming message will appear on the display and it will stop when you push a +/- button . Then the display will indicate the real temperature on the tweezer.



Temperature setting up

Press button “ 2 “ or “ 3 “ and the display will show the temperature and “ S “. After 2 sec. the display will show the real temperature of the tips


BE CAREFUL !

If you work with just one tweezer remember to connect only the n. 1 plug.
If you connect wrongly the tweezer into the plug n. 2 (and nothing into the plug n. 1) the machine will not work and on the display will appear the message “ 511 C “.
If you don't need two tweezers simultaneously disconnect the tweezer n. 2

Description of the equipment:

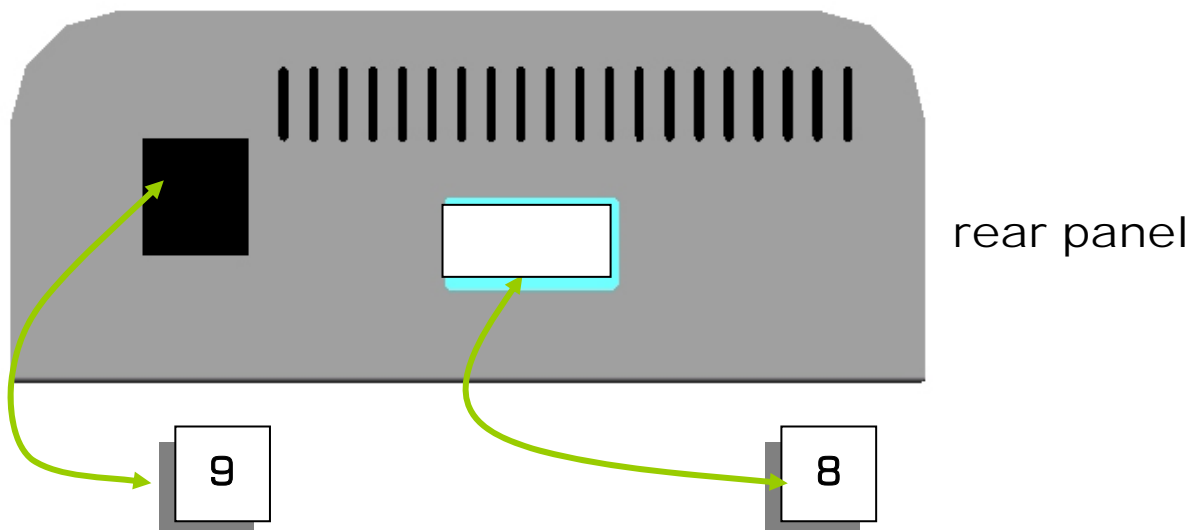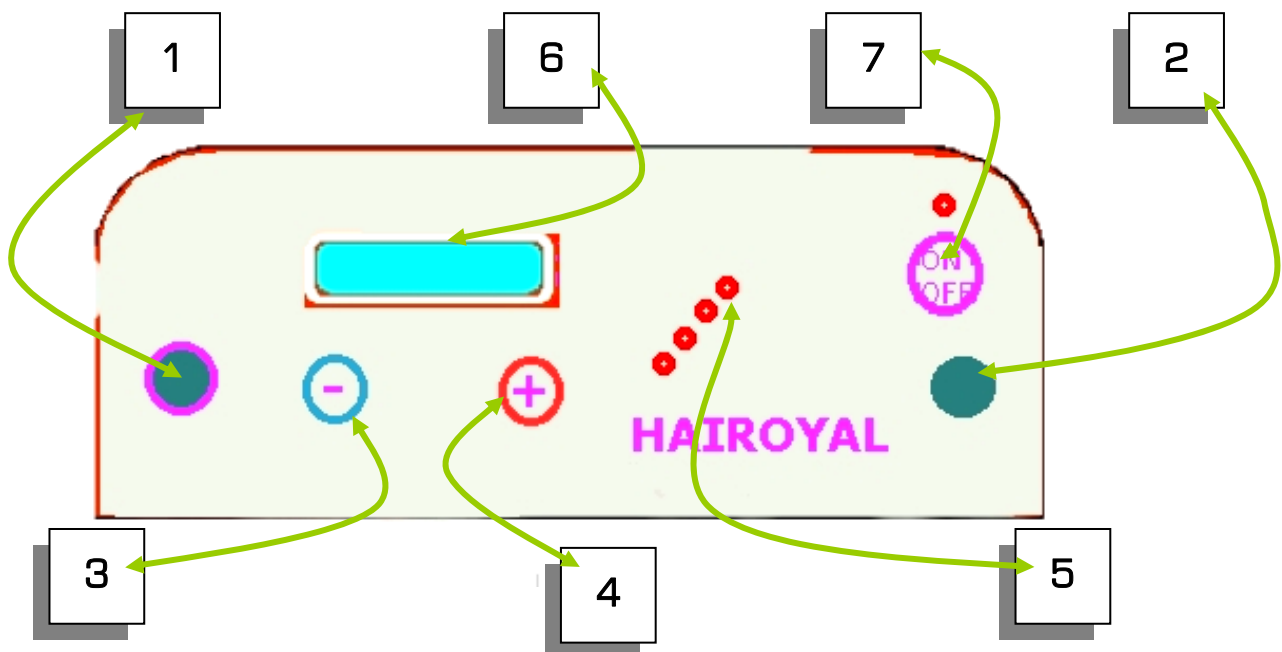

1. tweezer plug n.1
2. tweezer plug n. 2
3. temp. button " down "
4. temp. button " up "
5. leds for " working on "
6. LCD
7. on/off switch
8. serial num. and electrical data label
9. main socket + fuse + main switch

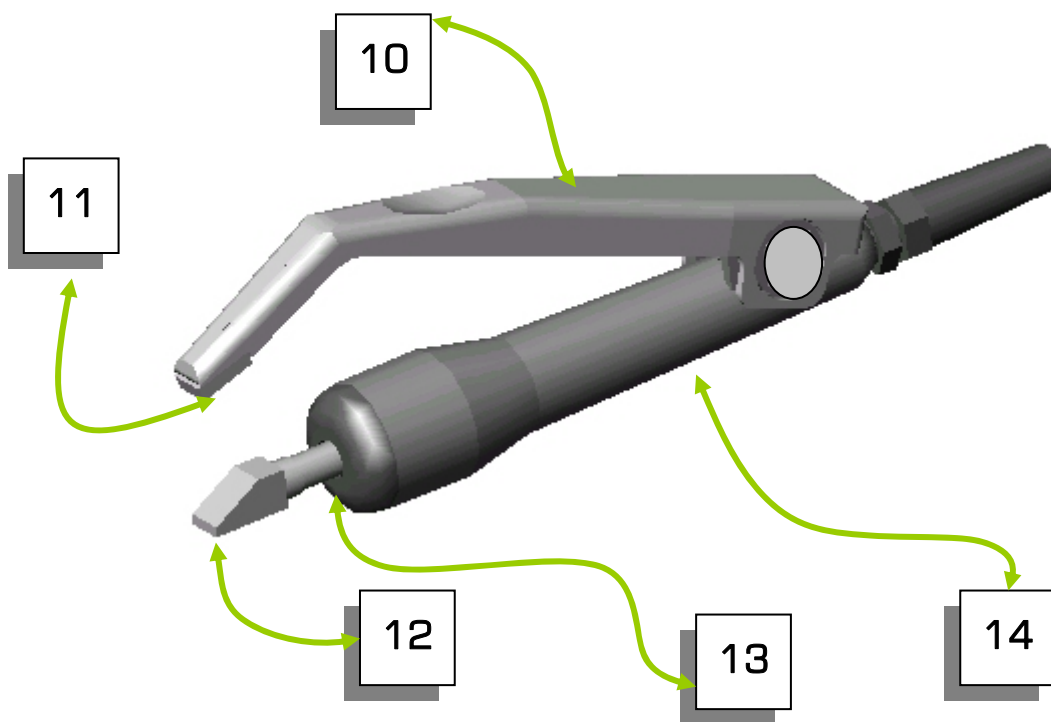

hot tweezer

10. lever
11. PTFE bumper
12. hot tip
13. heater
14. handle

Error Message

If the display gives you the message “ 511 C “ please check the following:

- uncorrect connection of the tweezer
- heater broken
- tweezer cable broken
- thermocouple broken
- thermocouple cable broken

Warranty Card - Mod. hairoyal

serial no.	
Purchasing date	
Customer's name & address	
Customer's phone.n.	
Dealer's name and address	
Dealer's stamp & signature	
Customer's stamp & signature	

CAUTION Please ensure the form above is completed at the time of purchase and present it to the dealer to qualify for guarantee service, otherwise your guarantee may be affected

